Installation Guide

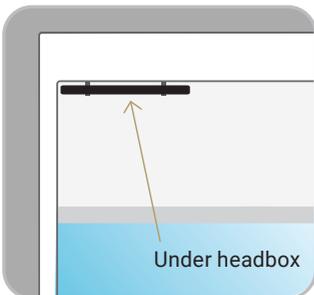## External Battery Pack

Part #: MT03-0305-050011

Step 1

Charge the battery pack for 7 hours
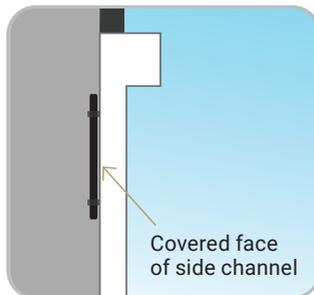before mounting it.

Step 2
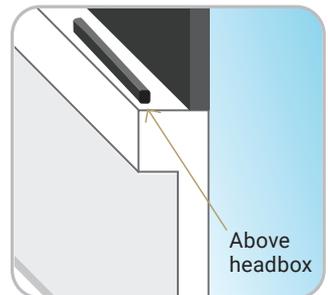
Mount the battery pack on the Zipscreen.

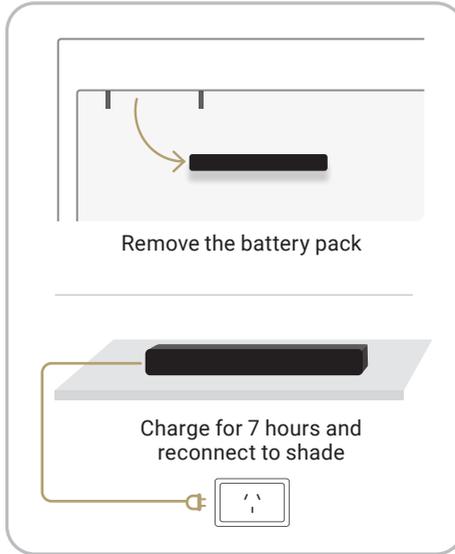| Option 1	Option 2	Option 3
Under headbox	Covered face of side channel	Above headbox

IMPORTANT
Ensure the battery is positioned away from direct contact with water
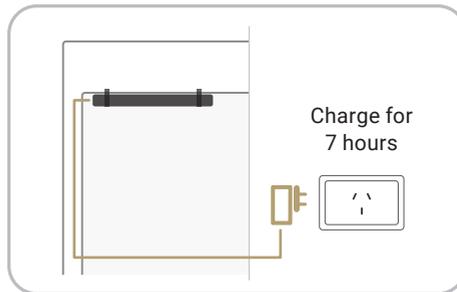or exposure to adverse weather conditions during installation.

Charging Guide

Option 1
Remove and charge

Remove the battery pack

Charge for 7 hours and reconnect to shade

Option 2
Charge in place

Charge for 7 hours

Option 3
Hot Swap

Remove

Replace

Spare Battery pack